




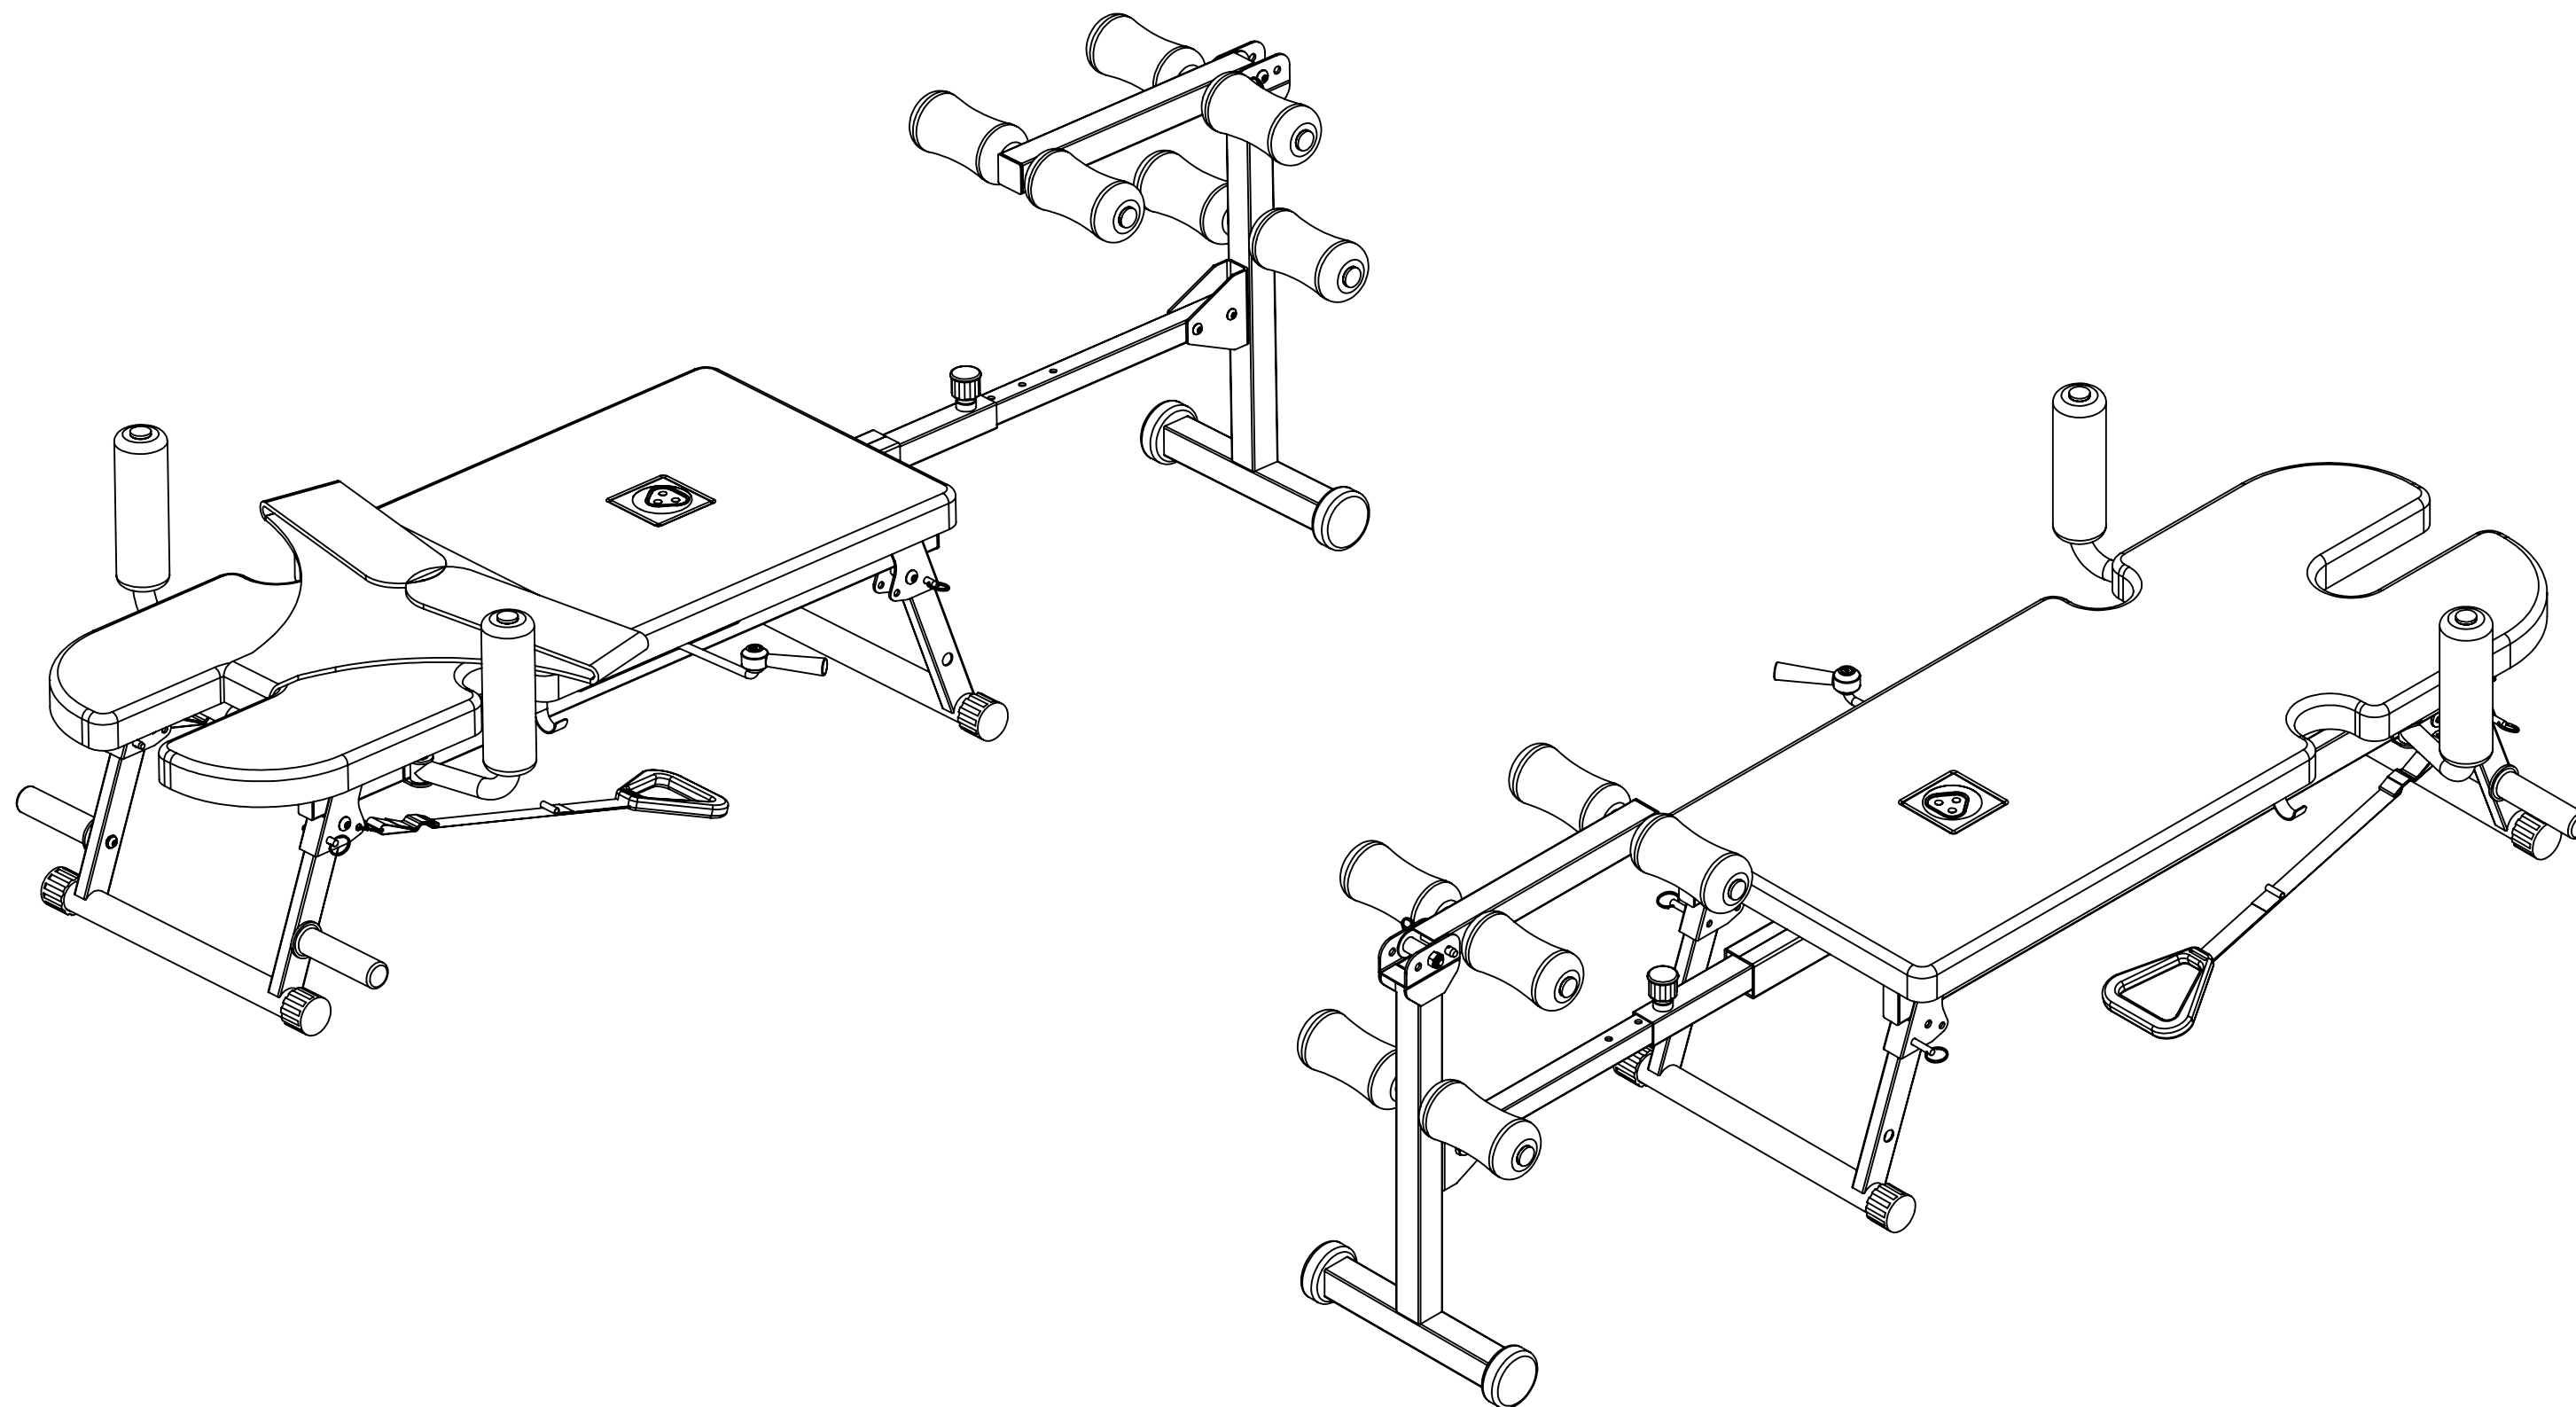


OVERALL ASSEMBLY

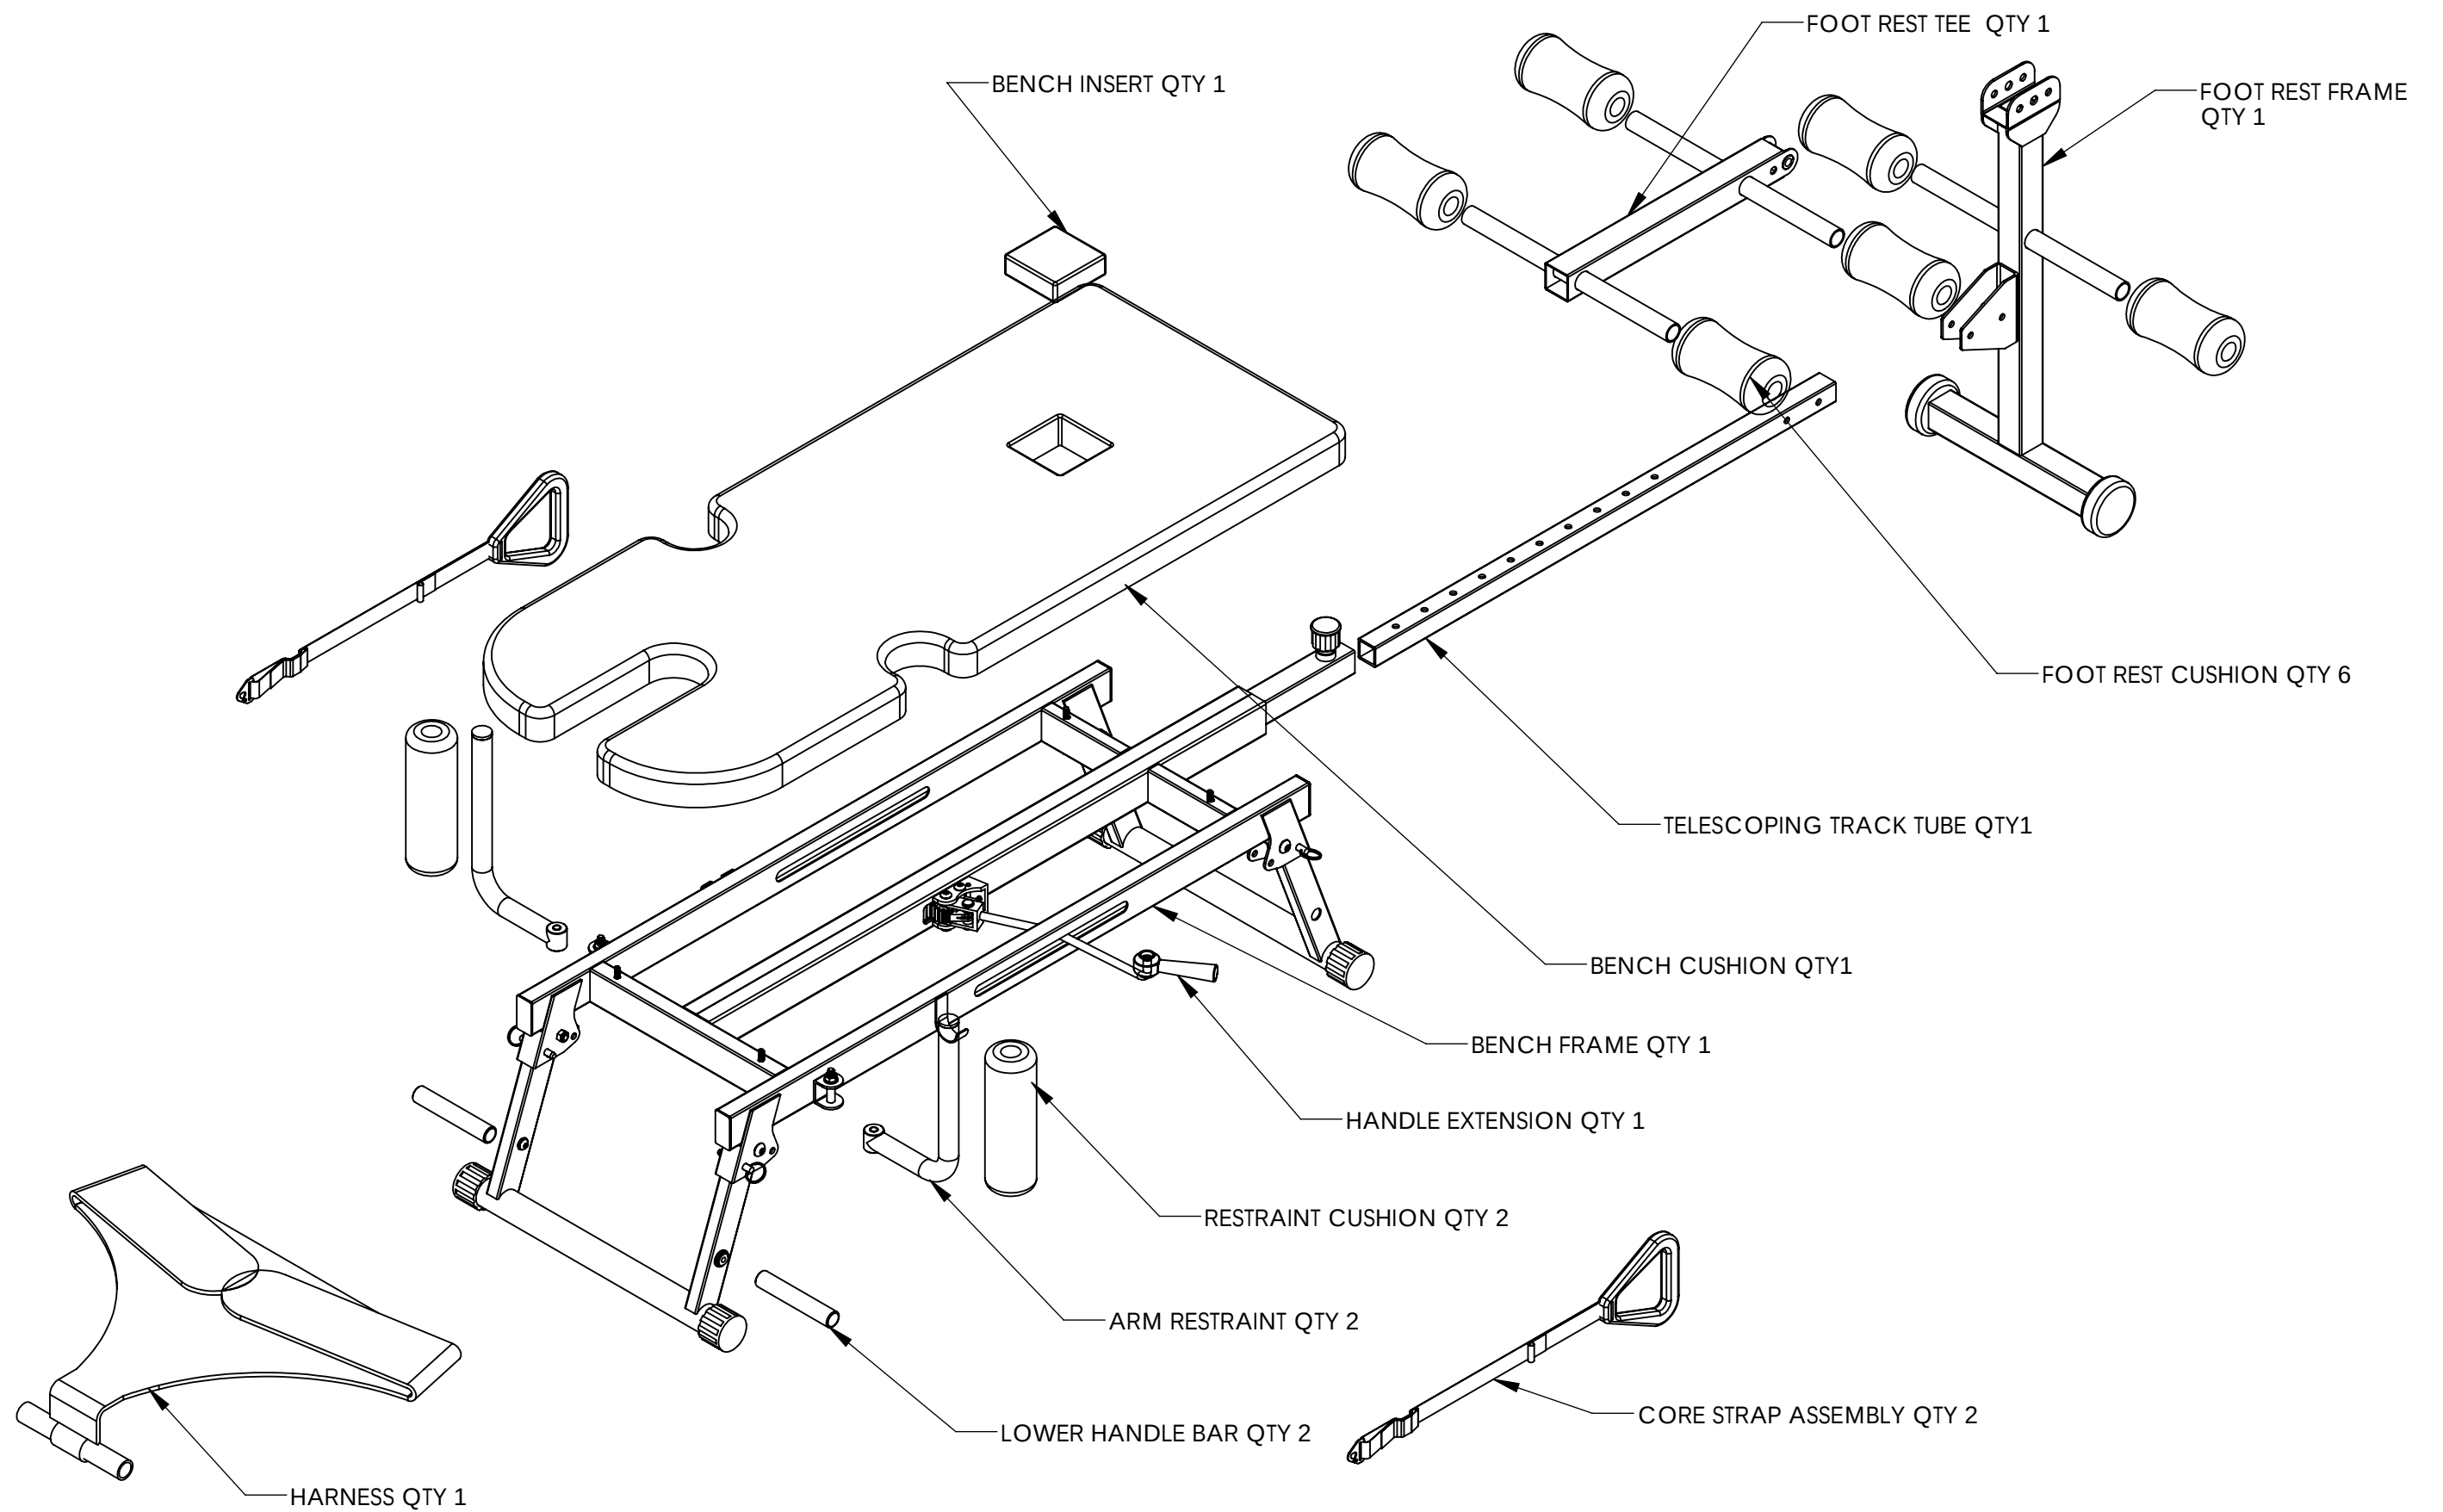


BENCH COMPONENTS

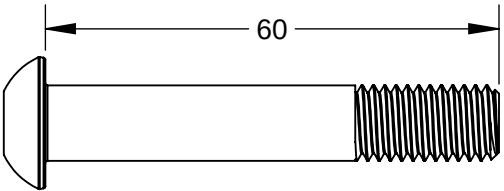


SCREW M10 X 60 QTY 1

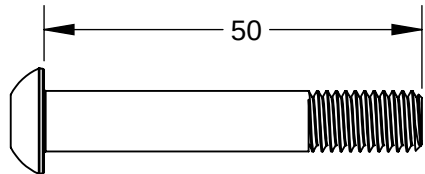


SCREW M8 X 50 QTY 2

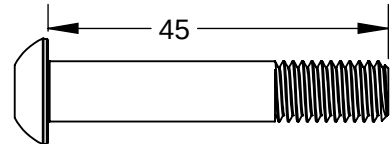


SCREW M8 X 45 QTY 2

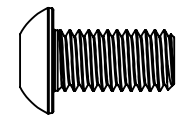


SCREW M8 X 16 QTY 2

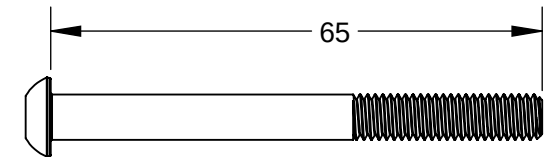


SCREW M6 X 65 QTY 4

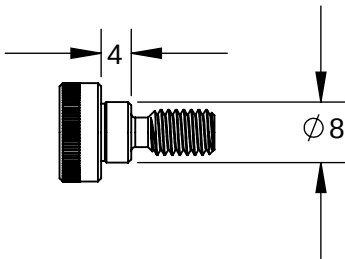


SHOULDER SCREW M8 X 4

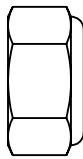


NUT NYLOCK M10 QTY 1

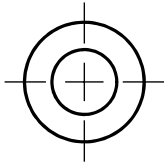


M8 WASHER QTY 2

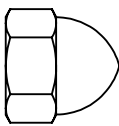


CAP NUT M8 QTY 2

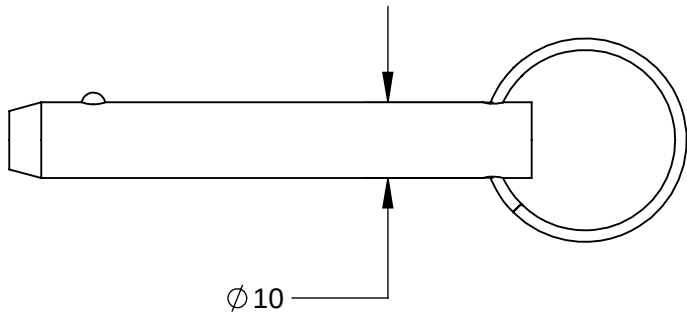

PIN M10 QTY 1

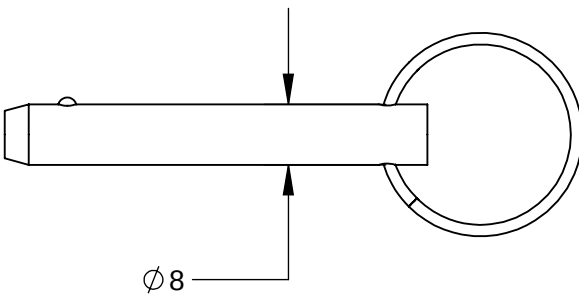

PIN M8 QTY 4

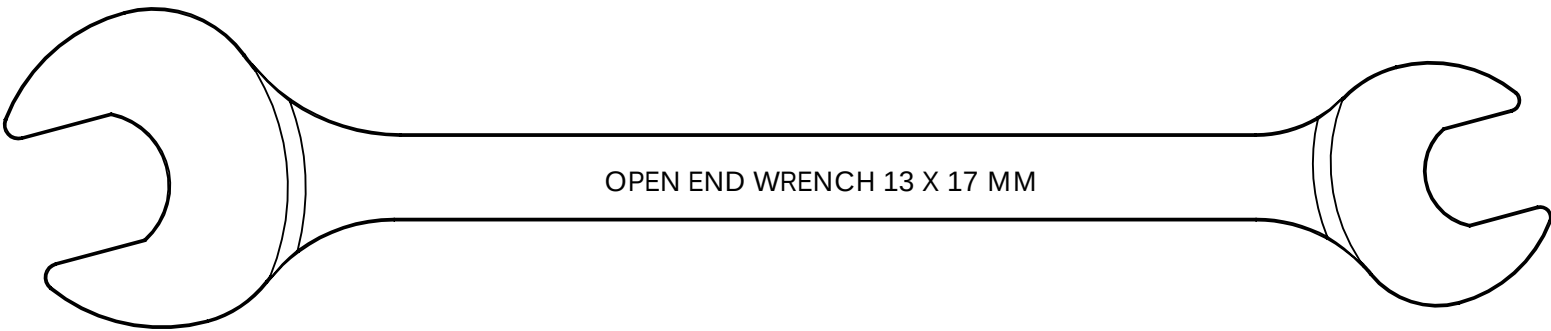

OPEN END WRENCH 13 X 17 MM



HEX WRENCH 4MM




HEX WRENCH 5MM



HEX WRENCH 6MM


HARDWARE

STEP 1.
UNFOLD THE BENCH LEGS AND INSERT ALL FOUR (4) M8 LOCKING PINS.
BE CERTAIN THAT THE PIN IS INSTALLED TO WHERE THE DETENT BALL IS
LOCKED INTO THE FRAME.

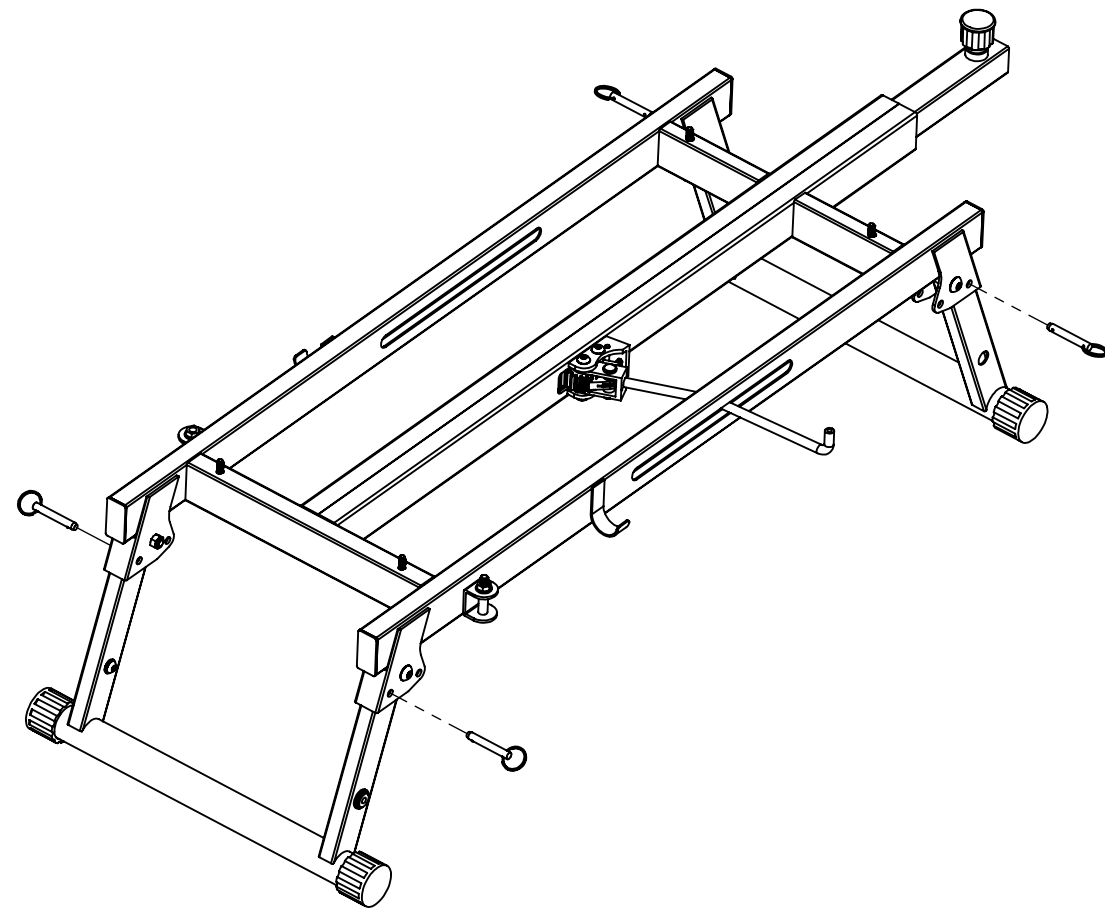

STEP 2.
INVERT BENCH CUSHION AND PLACE ON SOFT SURFACE.
INVERT BENCH FRAME.
FASTEN FRAME TO BENCH CUSHION WITH FOUR (4) M6 X 65 SCREWS.

*(INSTALLATION TIP: START ALL FOUR SCREWS INTO THREADED HOLES TO
ASSURE ALIGNMENT BEFORE TIGHTENING.)*

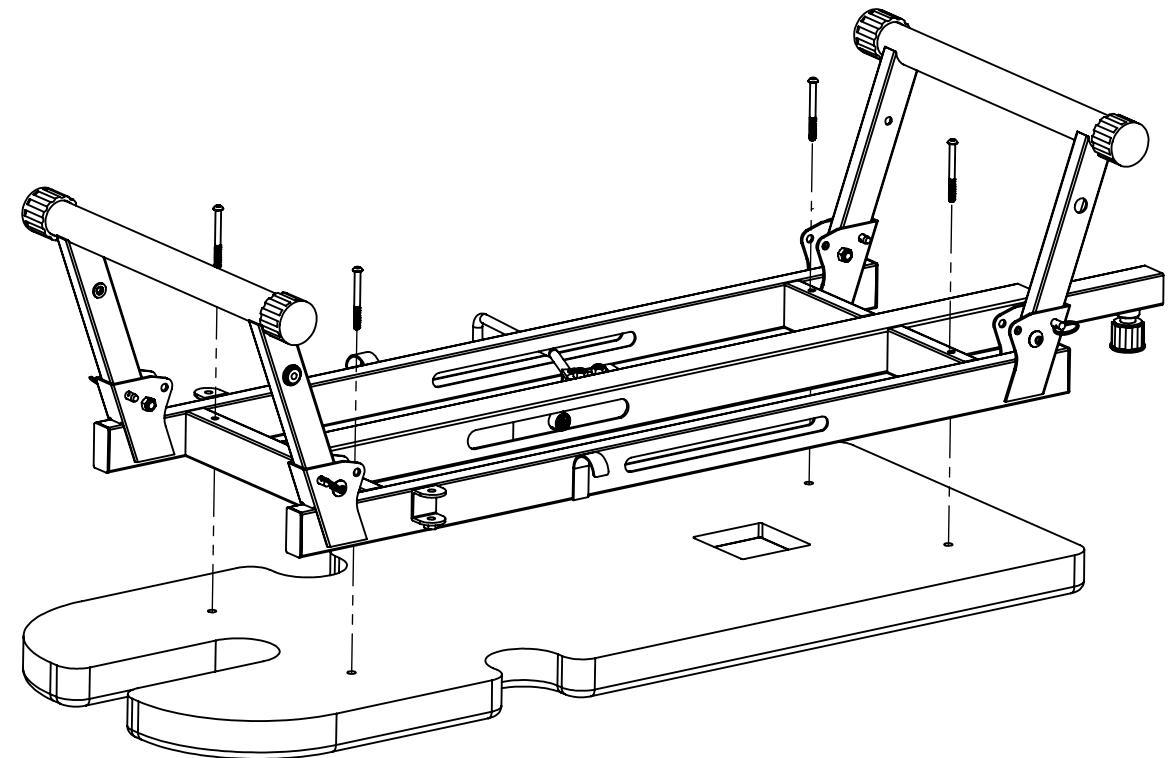


STEP 3.
INSERT TELESCOPING TRACK TUBE INTO FOOT REST FRAME AND FASTEN
WITH TWO (2) M8 X 45 SCREWS AND TWO (2) M8 CAP NUTS.

STEP 4.
INSERT FOOT REST TEE INTO FOOT REST FRAME AND
LIGHTLY FASTEN WITH ONE (1) M10 X 60 SCREW
AND ONE (1) M10 NYLOCK NUT THRU CENTER
HOLE. DO NOT OVER-TIGHTEN NUT OR FOOT REST
TEE WILL NOT PIVOT AS DESIGNED.

STEP 5.
INSERT M10 PIN THRU FOOT REST FRAME AND FOOT
REST TEE THRU OFFSET HOLE.

STEP 6.
SLIDE FOOT REST CUSHIONS ONTO COMPLETED
ASSEMBLY.

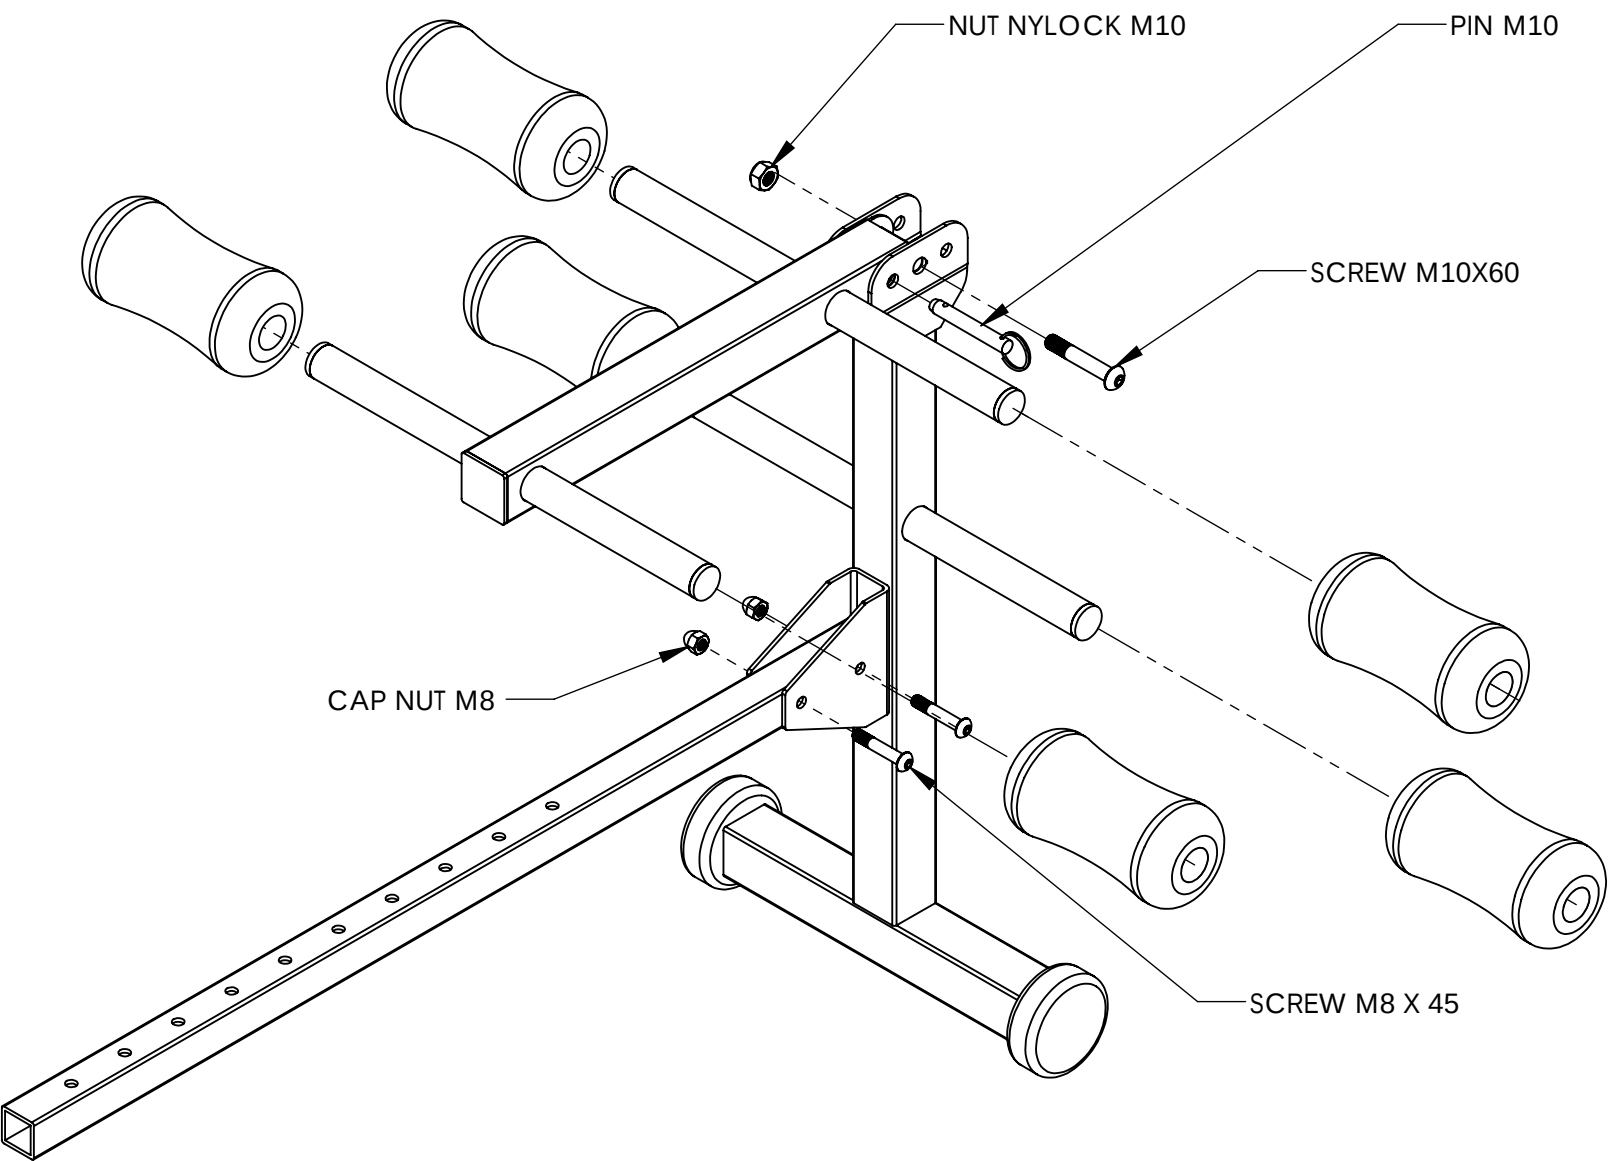



STEP 7.

LOOSEN AND LIFT UP HAND KNOB TO INSERT FOOT REST ASSEMBLY INTO BENCH FRAME.

CHOOSE FROM MULTIPLE HOLES TO SUIT USER'S PREFERENCE.

RELEASE HAND KNOB AND TIGHTEN INTO CHOSEN HOLE TO LOCK FOOTREST ASSEMBLY INTO THE BENCH FRAME.


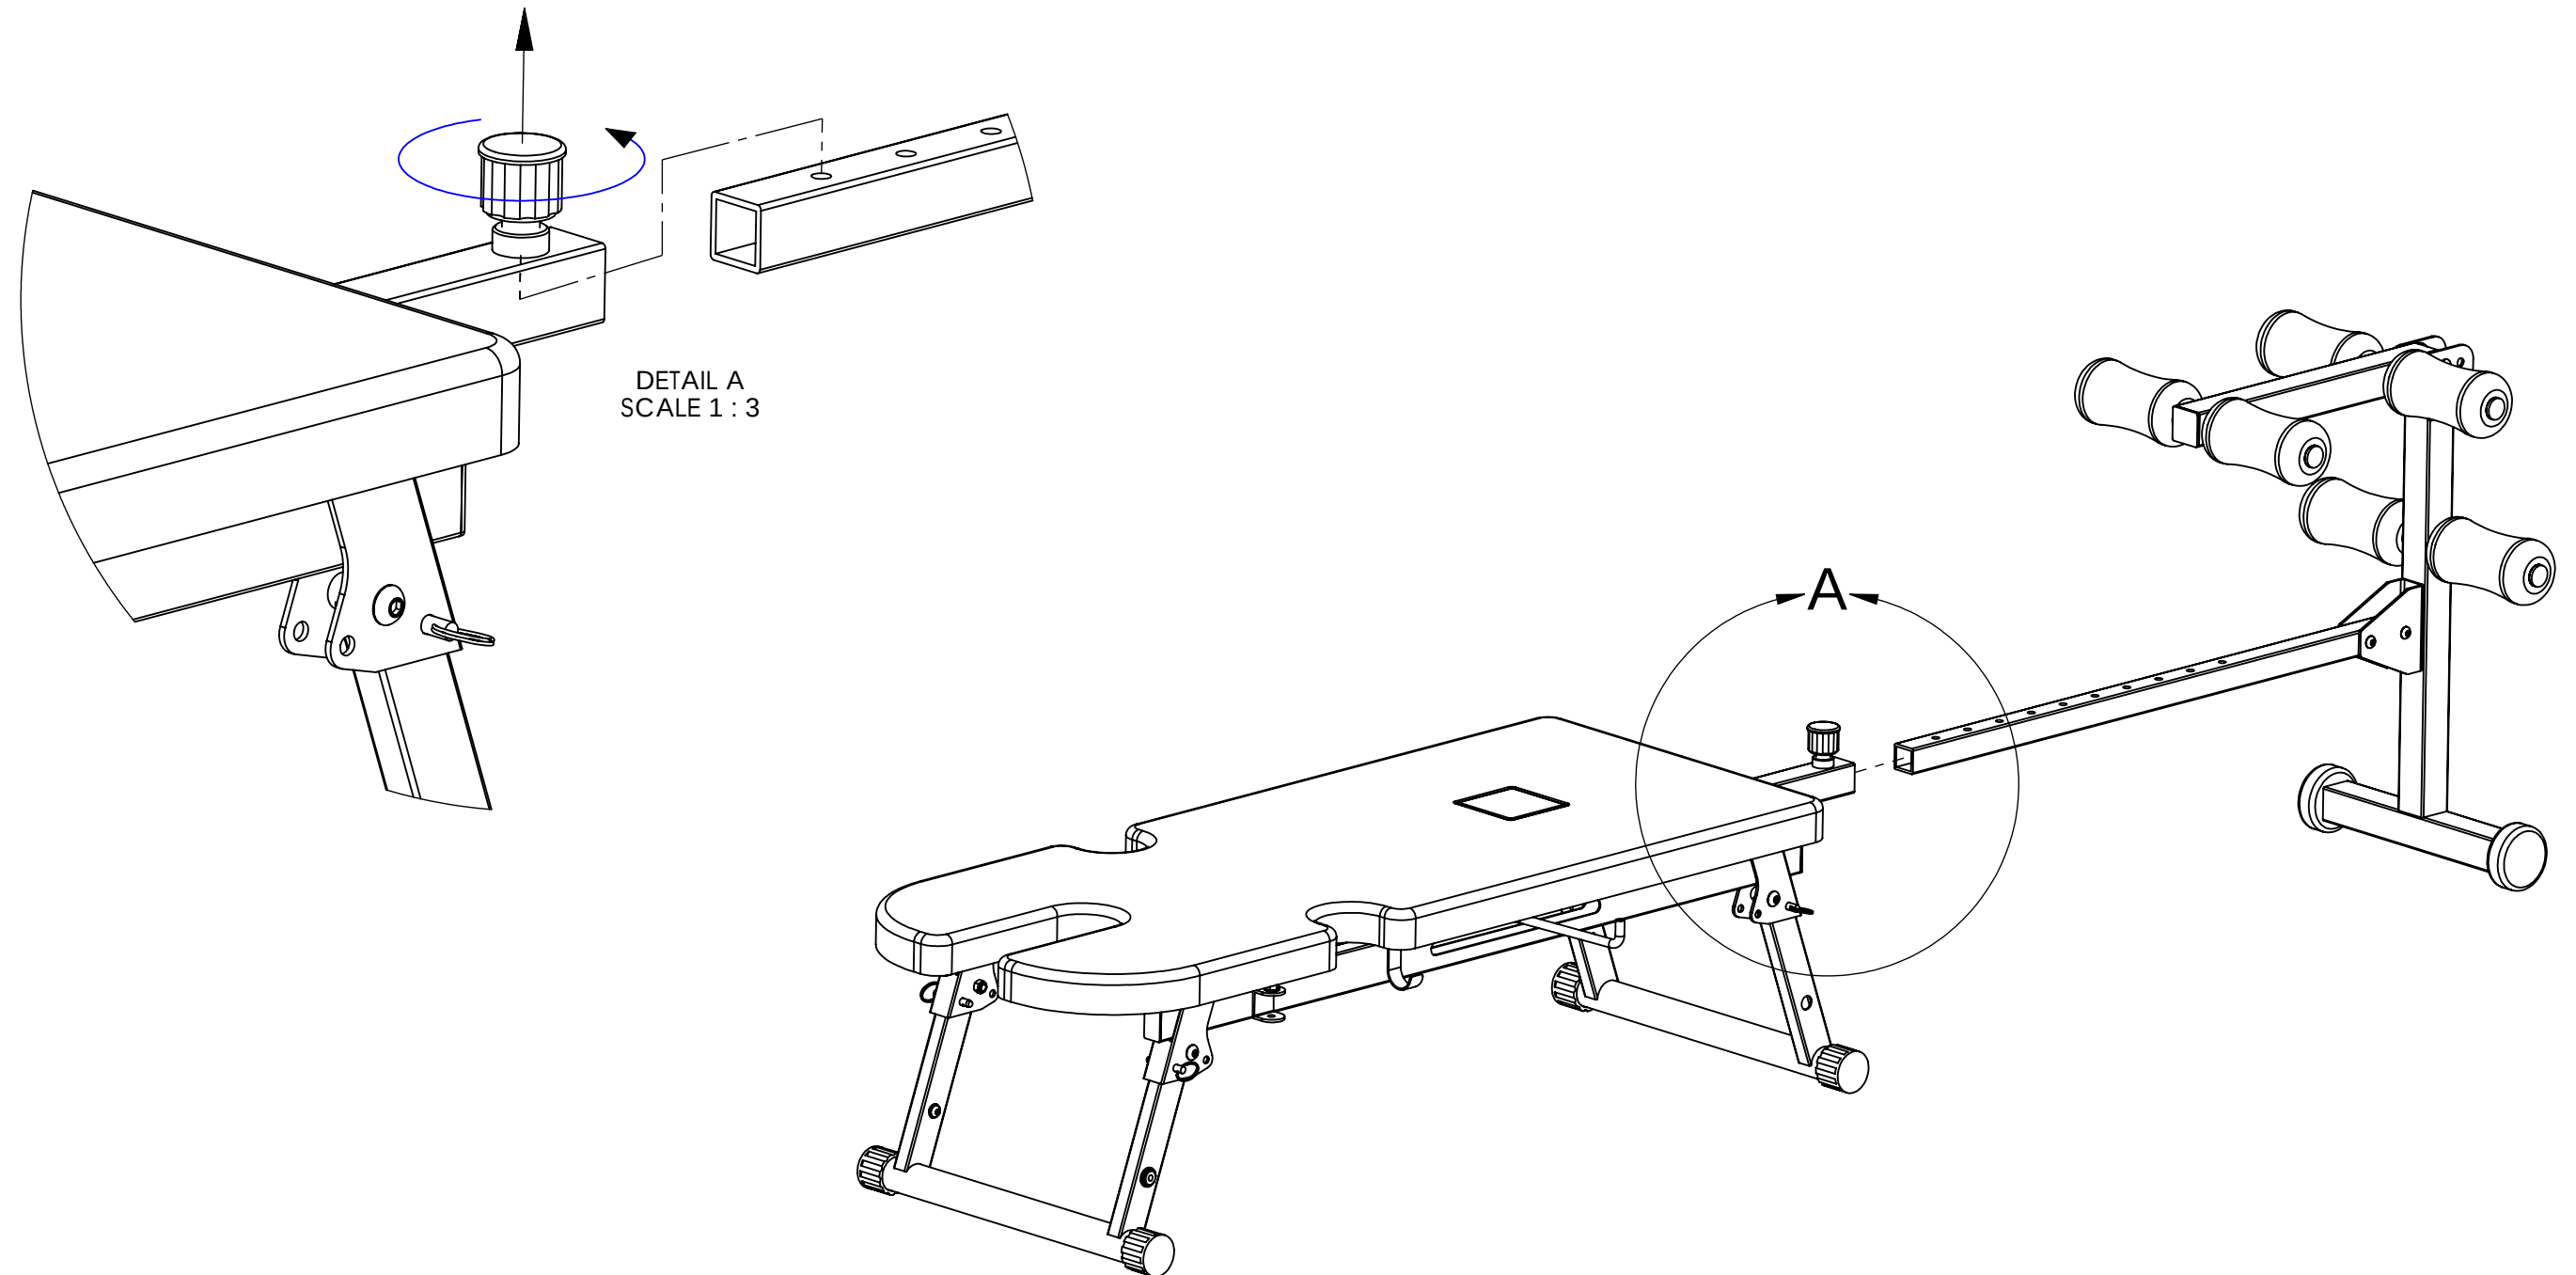


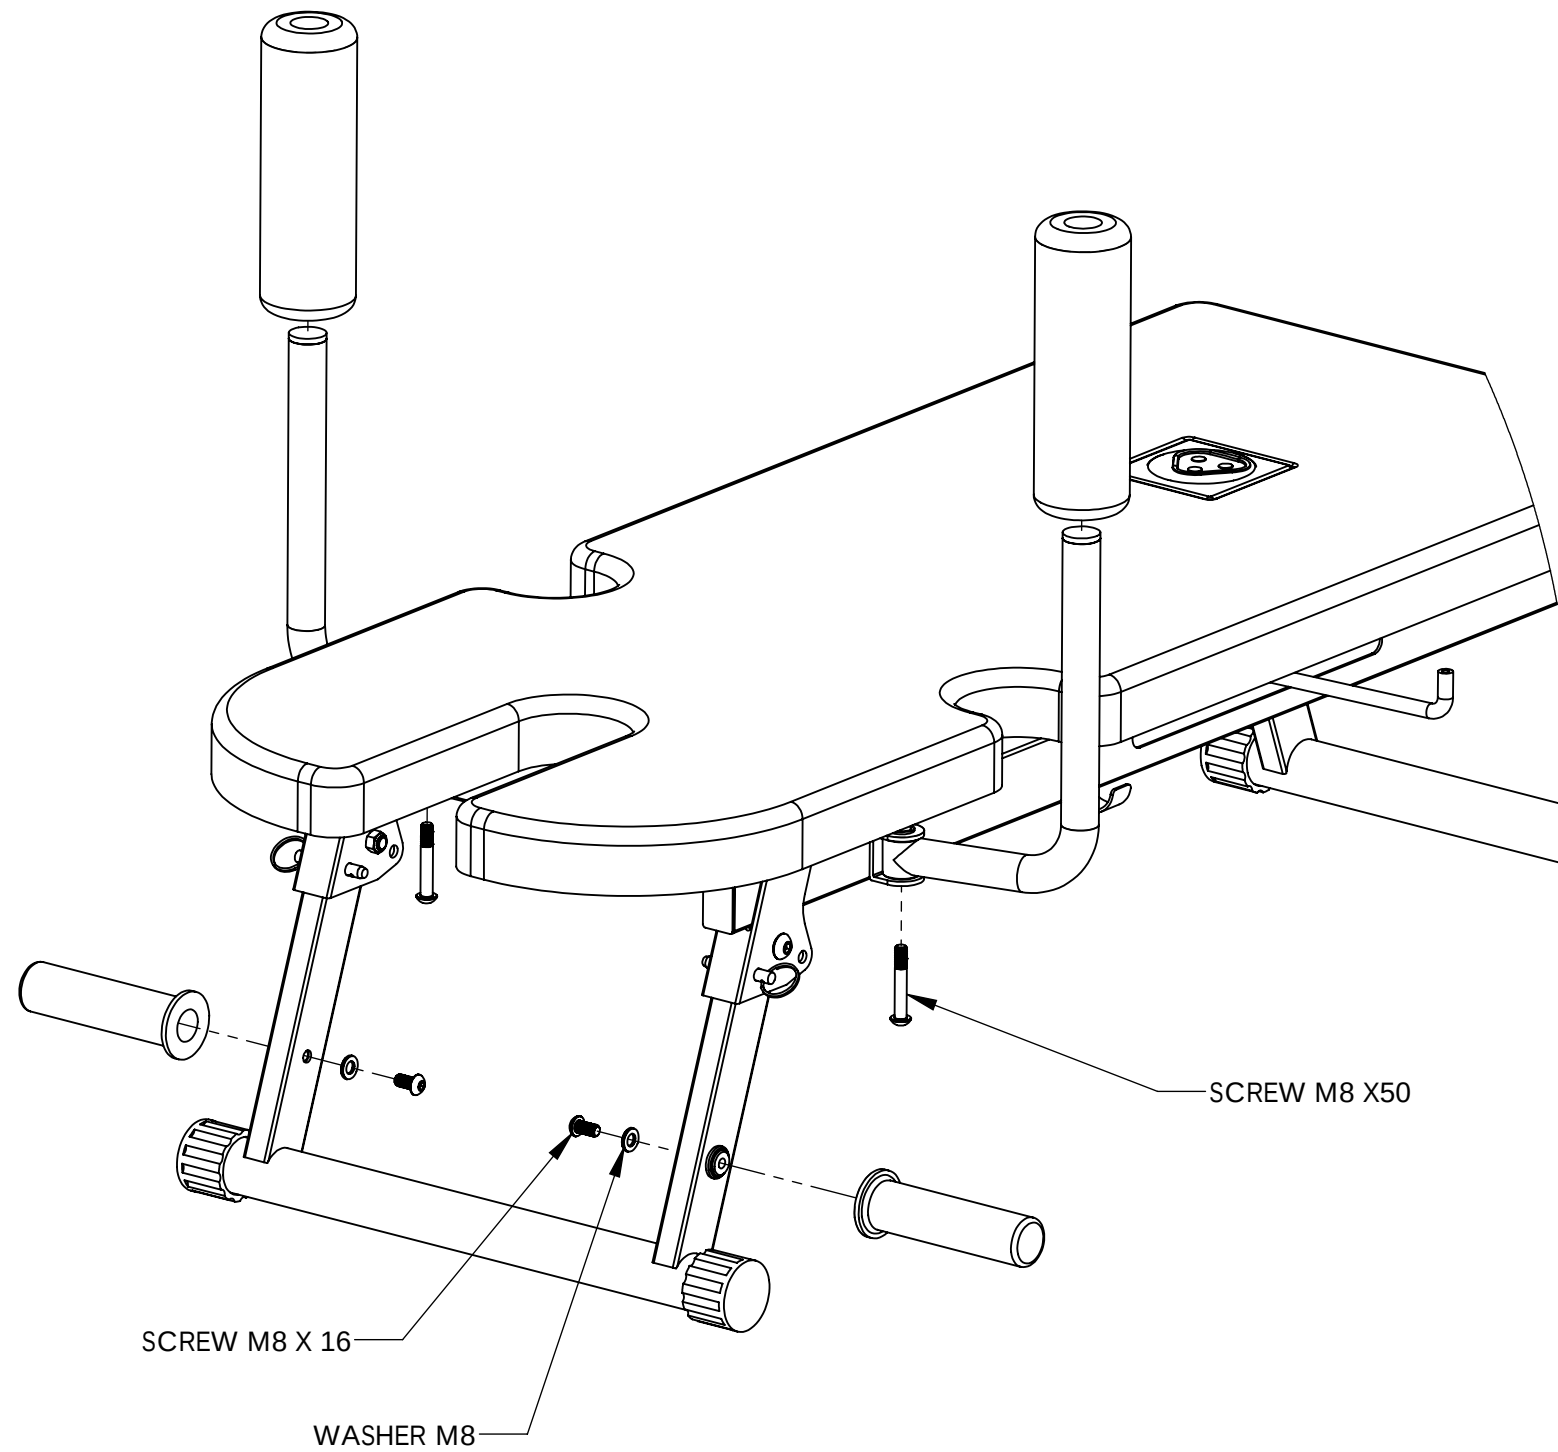

STEP 8.
INSERT ARM RESTRAINT INTO BENCH AND FASTEN WITH ONE
(1) M8 X 50 SCREW.
SLIDE RESTRAINT CUSHION ONTO ARM RESTRAINT.
REPEAT FOR OTHER SIDE.

STEP 9.
INSERT LOWER HANDLE BAR INTO FRAME LEG AND FASTEN
WITH ONE (1) M8 X 16 SCREW AND M8 WASHER.
REPEAT FOR OTHER SIDE.

STEP 10.
LATCH CORE STRAP ASSEMBLY INTO HOLE IN BENCH FRAME.
REPEAT FOR OTHER SIDE.
CORE STRAP HANDLES CAN REST ON HANGER.

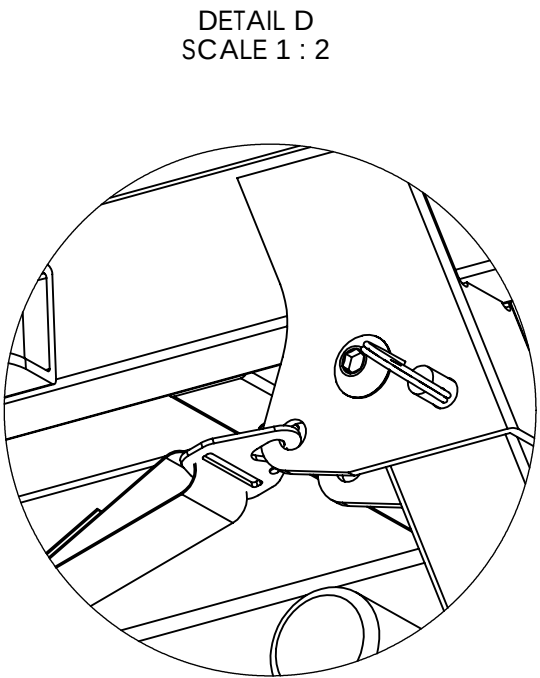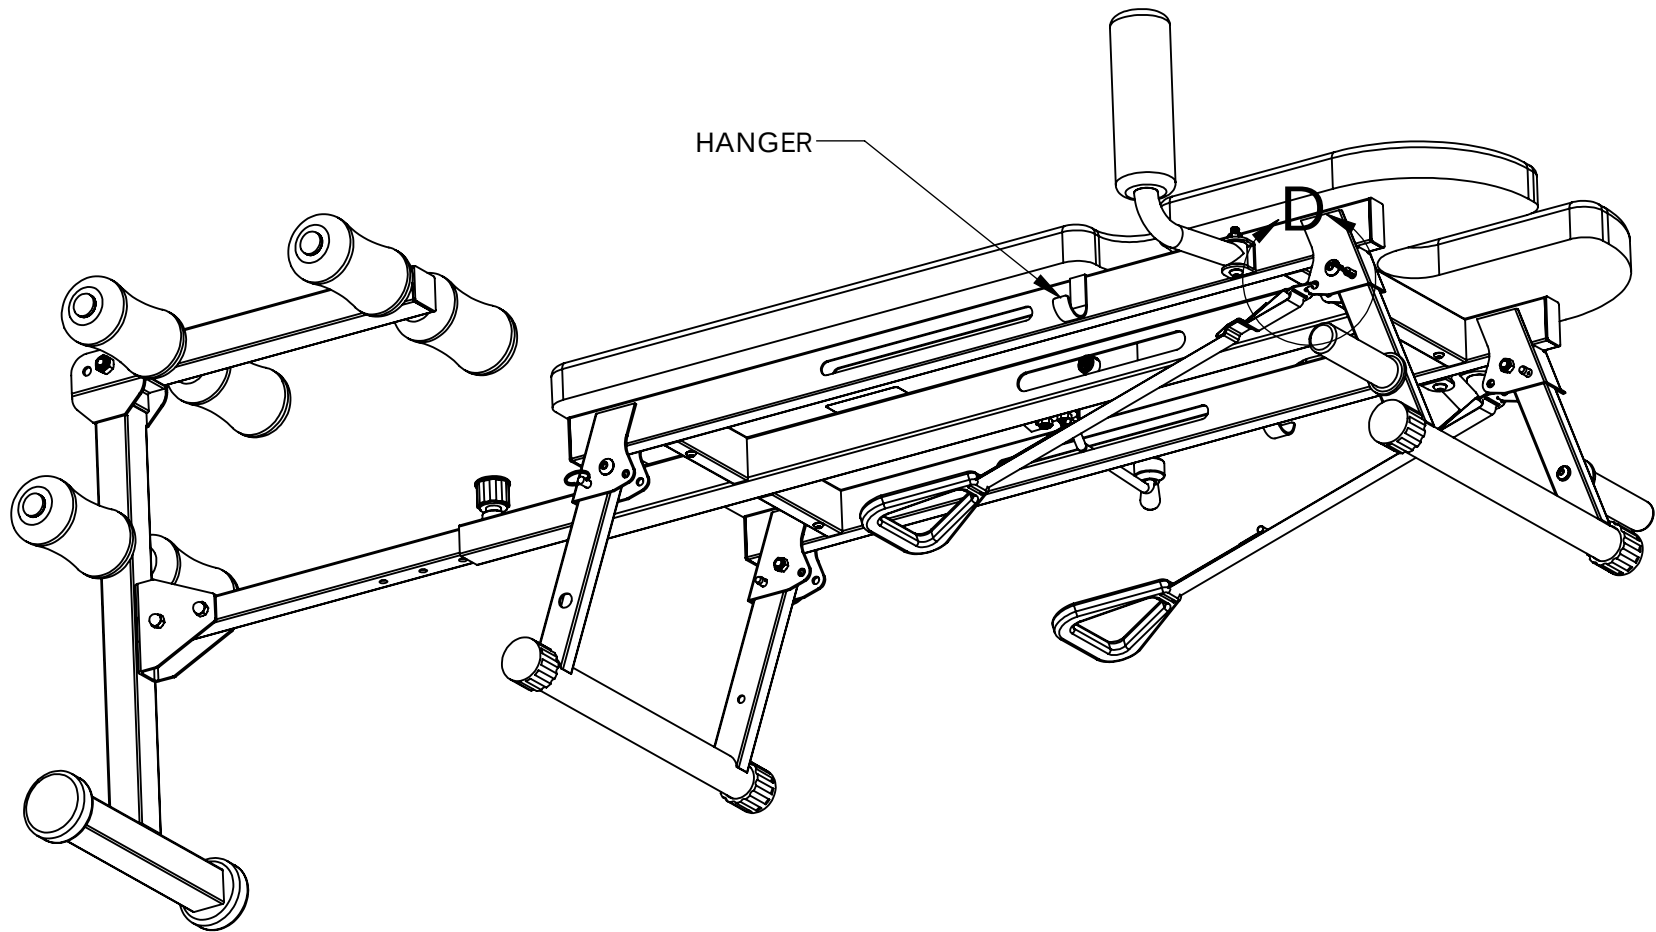

STEP 11.
FASTEN HANDLE EXTENSION ONTO RATCHET LEVER WITH M8 X 4 SHOULDER SCREW.

